

## Instructions on refilling cartridges

The Standard Media Street Cartridges can be refilled, despite the ease at which these cartridges can be refilled they are not sold as refillable cartridges and are not supported as such. The instructions laid out below are given in good faith however no guarantee is given to the accuracy of these instructions.

- 1/ Remove Cartridge from the Printer, before filling with ink use an [ink re-setter](#) to change the ink chip back to full.
- 2/ Fill about 13ml of ink into a suitable syringe.
- 4/ Remove the large plug, cover the small vent hole with either your finger or tape, fill cartridge with ink, replace plug.
- 5/ Keeping your finger over the vent hole return cartridge to printer, if you do not get a good nozzle check you may have to do a clean to remove air from outlet valve. leave for 30 minutes to allow ink to settle and air discharge.